 
 
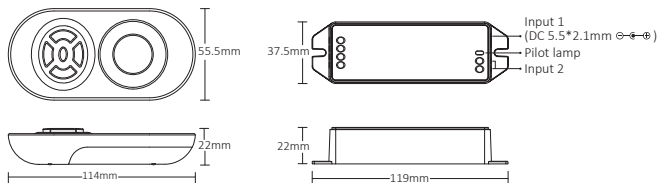 
 


1. Features

This controller adopt the widely used 433MHz wireless technology with the features of low power consumption, long signal transmitting and strong anti-interference, etc. Widely used on the controlling of hotel lighting and home lighting.



2. Products Key Diagram

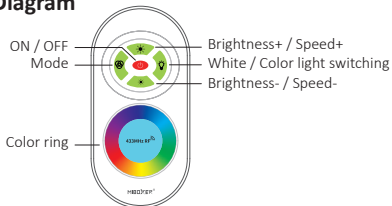



Touch the color ring to change colors



Turn on or off the linked lighting device



Dynamic mode switching button
(See the dynamic mode sheet)



Switch button for color light and white light.
Note: If you want to change color under white light mode, you need to switch to color light mode.



Under color light and white light mode, brightness +
Under dynamic mode, See the dynamic mode sheet

 


Under color light and white light mode, brightness -
Under dynamic mode, See the dynamic mode sheet

3. Connect diagram

Pilot lamp instruction:

Always lighting means working normally; Flash means receiving remote signal.

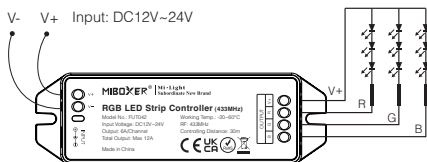

Note

Factory setting is one remote control one receiver. Users can group it as per the need. One remote can control countless receivers, but one receiver just can be controlled by max 4 remotes.


Dynamic Mode Sheet

Press  and  adjust brightness and speed.

Number	Dynamic Mode	Brightness	Speed
1	Change color automatically	Adjustable	—
2	Three color jump to change	—	Adjustable
3	Seven color jump to change		
4	Three color gradual change		
5	Seven color gradual change	Adjustable	—
6	Red jumps to change		
7	Blue jumps to change		
8	Purple jumps to change		
9	Green jumps to change		
10	Yellow jumps to change		
11	Cyan jump to change	—	Adjustable
12	White jump to change		
13	Red and blue flash alternately		
14	Blue and green flash alternately		
15	Red and green flash alternatively		

4. Linking Code / Unlinking Code Instructions

 Linking the controller




Switch off light, after 10 seconds then switch on again.

Link / Unlink button



2

 Short press "Link / Unlink" button 1 time within 3 seconds when light on.




Lights blink 3 times slowly means linking is done successfully.



If the light not blink slowly, the linking failed, Please switch off the light again, and follow the above steps again.

 Unlinking the controller




Switch off light, after 10 seconds then switch on again.

Link / Unlink button



2

 Short press "Link / Unlink" button 5 times within 3 seconds when light on.



Lights blink 6 times quickly means unlinking is done successfully.



If the light not blink quickly, the unlink failed, Please switch off the light again, and follow the above steps to unlink again.

5. Attention

1. Please check whether the voltage of the power supply is in accordance with the light, and please check the connection of both the cathode and anode, otherwise the light will be broken.
2. Please don't connect wires with power on. Please turn on again only when it is in right connection and no short circuit.
3. Non-professional user cannot dismantle the lighting fixtures directly.
4. Please do not use the light in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.

Made in China

