

## 40W RGB+CCT Panel Light Driver Instruction Manual

### Product features

The shell is made of galvanized material, with beautiful appearance. Support 2.4G RF remote control. Also support smartphone App control and 4G long distance control (2.4GHz Gateway is needed).

Panel light driver has signal Auto-transmitting function, adopt the widely used 2.4GHz wireless technology with the features of low power consumption, long signal transmitting and strong anti-interference, etc.



Color temperature adjustable



Dim brightness



2.4G RF wireless transmission technology



Remote control distance 30m



 
Auto transmitting



Support Smartphone app control (2.4GHz gateway is needed)




Support third party voice control (2.4GHz gateway is needed)

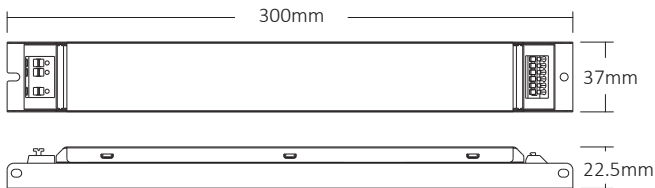


## Connection diagram

 Input:  
AC180~240V




## Compatible with these 2.4G RF remote controls (Purchased separately)

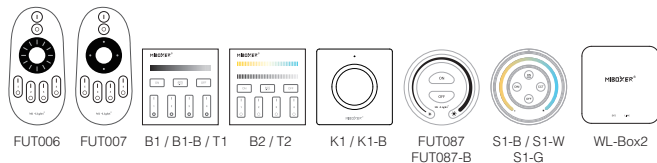 


## 2.4G RF Remote control instruction

 
### 1). Linking Code Instructions

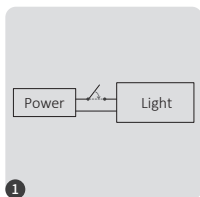

 Power off 10 seconds and power on again.

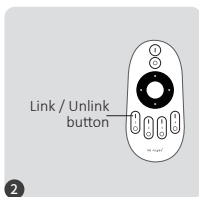

Short press " | " button 3 times within 3 seconds.

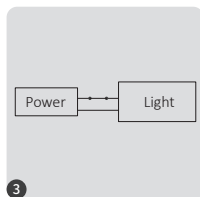 


Lights blink 3 times slowly means linking is done successfully.



Linking failed if light is not blinking slowly, Please follow above steps again.  
(Note: Light that have linked can't link again)


### 2). Unlinking Code Instructions

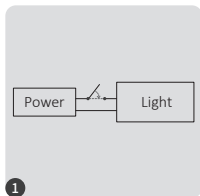 

Power off 10 seconds and power on again.



Short press " | " button 5 times within 3 seconds.

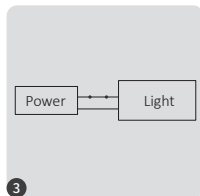 

Lights blink 10 times quickly means unlinking is done successfully.



Unlinking failed if light is not blinking quickly, Please follow above steps again.  
(Note: Light haven't linked that don't need to unlink)

### 3). Auto transmitting (2.4G RF remote signal)

One light can transmit the signals from the remote control to another light within 30m, as long as there is a light within 30m, the remote control distance can be limitless.



### 4). “Do Not Disturb” mode is activated and shut down (default activated)

Turn on “Do Not Disturb” mode (wide using in the area which have power failure frequently to save energy)

#### 2.4G RF Remote turn on and turn off instruction

##### Turn on “Do Not Disturb” mode:

Press “OFF” button three times within three seconds and press “ON” button three times, Activated successfully once led light flashes four times quickly.

##### **Attention: Do not disturb mode is activated**

1. When the light is OFF status (For example: Use app or remote to turn off light)

The light is OFF status once you turn off power and turn on again.

**(User must turn off and turn on power twice times to activate light or use APP / remote to activate light)**

2. When the light is ON status

The light is ON status once you turn off and turn on power one time.

##### Turn off “Do Not Disturb” mode:

Press “ON” button three times within three seconds and press “OFF” button three times, closed successfully once led light flashes four times slowly.

**Attention: After turn off “Do Not Disturb” mode, for lamps no matter in what state, turn off the power of the lamp and then connect the power again, the lamps are light on.**

## Attention

1. Please check whether the voltage of the power supply is in accordance with the light, and please check the connection of both the cathode and anode, otherwise the light will be broken.
2. Please don't connect wires with power on. Please turn on again only when it is in right connection and no short circuit.
3. Non-professional user cannot dismantle the lighting fixtures directly.
4. Please do not use the light in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.



Scan QR code to watch 2.4GHz series video instruction Or enter into following link directly

[https://miboxer.com/light/video/1pc\\_remote.html](https://miboxer.com/light/video/1pc_remote.html)



Made in China